



IMPORTANT

Remove jumper between terminal I & C before connecting interlocks.
 Wire in accordance with local & National Electrical codes. Read instructions carefully before wiring and operating.
 Frame shown in heavy line represents Thermolec Electric Coil. All wiring outside this frame are "typical external wiring by others".

LEGEND

- A Automatic reset thermal cut-out
- S2 Air flow sensor
- DISC Disconnect switch
- D35 Electronic controller
- F Fuse or fusible link
- H Heating element
- M Manual reset thermal cut-out
- T Control transformer
- SSR Solid State Relay
- PDS Pressure Differential Switch
- C1,C2 Operating Contactors
- DT Duct Thermostat
- RT Room Thermostat
- CM Back-up Contactor
- R Relay